

ACP PCB Attachment Instructions


PCB Attachment

*The mounting holes in the interposer are intended to be threaded onto the screws, for the purpose of alignment. Forcing the screws into the interposer will damage the interposer and void the warranty of the connector

1. Place interposer over mounting holes in PCB. (Ensure Pin 1 Indicator is facing up)



2. Thread #0-80 screws through the bottom side of PCB, into the interposer

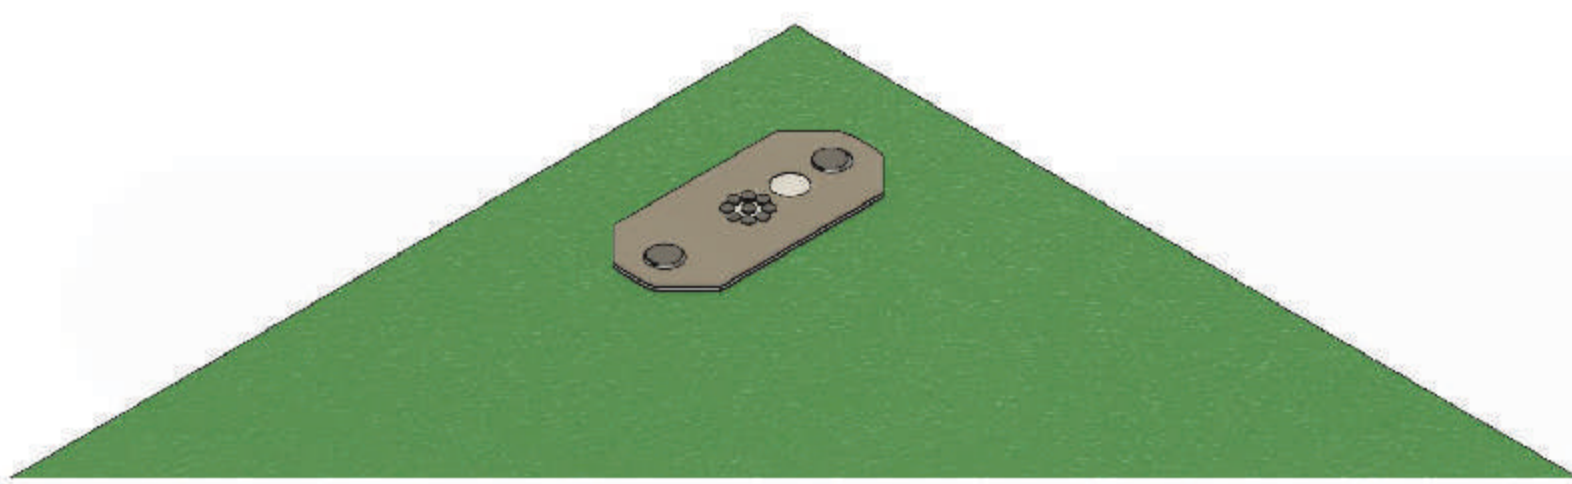

3. Place ACP Jack connector in place, over the mounting holes



4. Ensure center pin of interposer is aligned with the PCB contact area
5. Thread screws into ACP Jack and tighten

